



QUICK REFERENCE INSTALLATION GUIDE




Install water-resistive barriers.
(exterior applications)

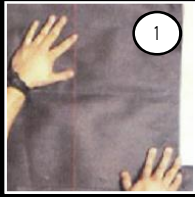


Install corrosion-resistant metal lath.

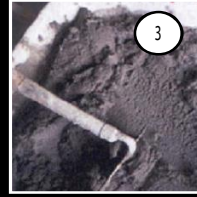


Mix mortar.

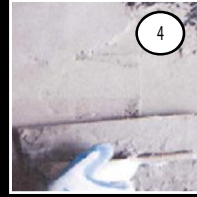

Apply mortar setting bed.

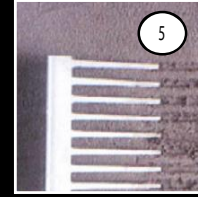


Rake mortar setting bed.

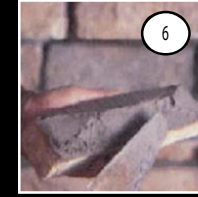


Apply mortar to the entire back of the stone.




Install corners first.

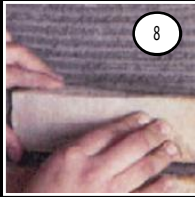


Install flat stones.

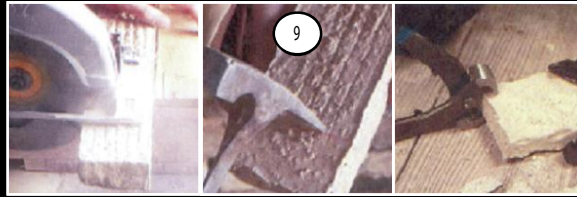


Trim stones to fit.

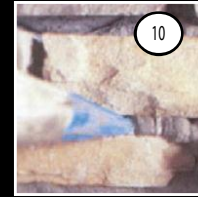

Grout joints.

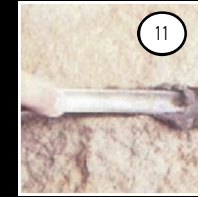

Strike joints.

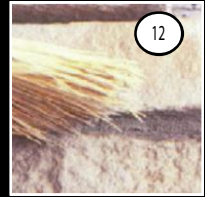


Brush off excess mortar with a dry brush.

TOOLS REQUIRED

- É Hammer and/or Staple Gun to apply felt paper and metal lath (steps 1 and 2)
- É Wheelbarrow and Hoe or Bucket and Drill Paddle for mixing mortar (step 3)
- É Notched Trowel to apply mortar coat to metal lath (step 4)
- É Mortar Rake for mortar setting bed (step 5)
- É Mason's Trowel to apply mortar to stone (step 6)
- É Circular Saw with Masonry Blade, Nippers, and Hatchet for cutting stone (step 9)
- É Grout Bag for grouting joints (step 10)
- É Jointing Tool or Wooden Stick to finish mortar joints (step 11)
- É Whisk Broom for cleaning joints and stone (step 12)
- É Level and Tape Measure for the creation of straight joint lines
- É Safety Glasses, Gloves, and Dust Mask for safety protection

**Please note that this is a quick reference installation guide. Refer to Rocky Mountain Masonry's Installation Guide on our website for detailed instructions.*

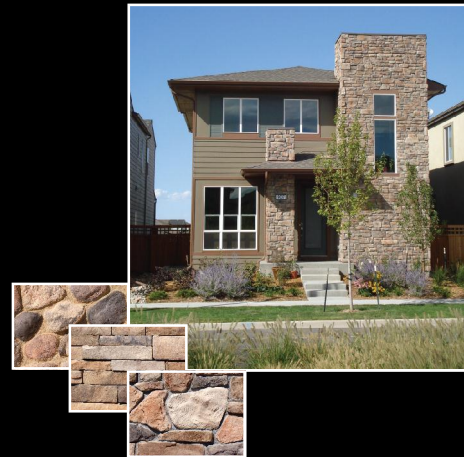

SPIRIT
STONE™

*the beauty and spirit of natural stone
made by hand*

Manufactured by Innovative Masonry Products, LLC, 3232 Road 101 E, Bldg. 243, Sidney, NE 69162 (308)254-4400

www.spiritstone.us.com